



ROKK Horizon 3 Tent – Use and Care Instructions

TO SET UP TENT

- Assemble poles. Insert each section fully. Don't let pole sections snap together.
- Spread out ground cloth in tent set up location.
- Lay out tent body over ground cloth, floor side down, stretching out all 4 corners.

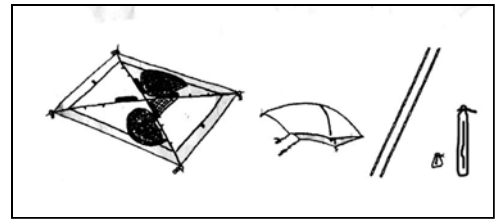

- Starting at one corner of tent, slide a tent pole through 2 opposite tent sleeves. Repeat with second tent pole. Poles will form an "X" across the tent.
- Starting with back 2 corners, insert end of poles into metal grommets closest to tent. Repeat for front corners, lifting poles to insert opposite end of poles into grommets closest to tent.
- Insert stakes into webbing loops at each corner of tent. Hammer stakes into ground at 45° angle.
- Place fly over tent, locating zippers over doors. Attach fly to tent with buckles at each corner.
- Tuck ground cloth under tent if it extends past tent body.

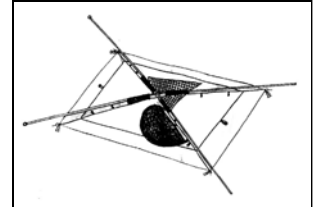

TO TAKE DOWN TENT

Remove tent stakes. Remove fly and open door. Pull poles out of grommets. Remove poles from tent sleeves.

TENT CARE GUIDELINES

Picking a campsite – Avoid low spots that can collect water. Don't set tent up under dead trees or branches that could fall. Clear the ground of sharp objects.

Keep flames out of tents – Tent fabric is extremely flammable.

Don't keep food in the tent – food odors attract wild animals that could chew or claw through the tent, damaging it beyond repair.

Condensation – An adult gives off about a pint of water each night through breathing and perspiration. To reduce condensation, leave windows partially open at night.

Zippers – Never force a jammed zipper. Instead carefully remove any trapped material. Carefully opening and closing a separated zipper may allow it to repair itself.

Contaminants – Insect repellent, hair spray, stove fuel, etc. may damage a tent.

Housekeeping – Debris stuck on shoes may damage tent floors. Keep tent floor clean.